

F-PRO 4500 Feeder Protection Relay

Ordering Template

In order to specify and order an ERLPhase F-PRO 4500 relay properly configured for the application, a part number must be constructed as indicated below:

F-PRO aaaa - b - c - d - e - f - g - h - i - j - k

aaaa — Model:

- 4500

b — Enclosure:

- 1: E12 Case – Flush mount
- 2: 19" Case – Rack mount

c — Analog Channels:

- A: 4VT + 5CT

d — Auxiliary Supply & External Input Rating:

- 1: Auxiliary supply – 20 to 60 V_{dc}, external input – 24 V_{dc}
- 2: Auxiliary supply – 20 to 60 V_{dc}, external input – 48 V_{dc}
- 3: Auxiliary supply – 80 to 300 V_{dc} / 80 to 250 V_{ac}, external input – 110 V_{dc}
- 4: Auxiliary supply – 80 to 300 V_{dc} / 80 to 250 V_{ac}, external input – 220 V_{dc}

e — Number of Inputs & Outputs:

- A: 8 External inputs, 8 relay outputs
- B: 16 External inputs, 16 relay outputs
- C: 16 External inputs, 24 relay outputs
- D: 24 External inputs, 32 relay outputs

f — Communication Ports:

- 1: Redundant Ethernet port (100BASE-T, RJ45, PRP)
- 2: Redundant Ethernet port (100BASE-FX, ST, PRP)
- 3: One Ethernet port (100BASE-T, RJ45)
- 4: One Ethernet port (100BASE-FX, ST)

g — Frequency:

- A: 50 Hz
- B: 60 Hz

h — Conformal Coating:

- 0: Not Coated

i — Custom Firmware Request:

- 0: Latest version (default)
- 1: Custom version (please specify firmware version number)

j — Custom Hardware Request:

- **0:** No special build instructions (default)
- **1:** Special build instructions (please specify special instructions)

k — Configuration ID:

- **B:** Internal use

Ordering Code Example	F-PRO 4500	1	A	3	D	3	A	0	0	0	B
Enclosure - E12 Case – Flush mount											
Analog Channels - 4VT + 5CT											
Auxiliary Supply - 80 to 300 V _{dc} / 80 to 250 V _{ac} External Input – 110 V _{dc}											
Number of Inputs & Outputs - 24 External inputs, 32 relay outputs											
Communication Ports - one Ethernet port (100BASE-T, RJ45)											
Frequency - 50 Hz											
Conformal Coating - No Coated											
Custom Firmware Request - Latest Version (default)											
Custom Hardware Request - No special build instructions (default)											
Configuration ID - Internal Use											

Standard Functions & Features:

- 1A (or) 5A CT secondary input is site selectable
- Disturbance Recorder, Swing Records, Sequence of Events, Metering, ProLogic™, Trip Circuit Supervision
- Front USB port and rear serial RS485 port
- Modbus (or) DNP3.0 are supported over RS485 port, DNP3.0 (or) IEC 61850 are supported over Ethernet
- IRIG-B (or) SNTP for time sync

Manuals:

The latest version of the manuals can also be downloaded from our website:

<http://www.erlphase.com/support.php?ID=documents>. If you do wish to purchase a hard copy manual, you may order that using the part number below.

<Part #119459> F-PRO 4500 User Manual

ERLPhase Power Technologies

Tel: +1 204-477-0591

Toll Free: 1-833-502-2160 (US & Canada)

Email: info@erlphase.com

The specifications and product information contained in this document are subject to change without notice. In case of inconsistencies between documents, the version at www.erlphase.com will be considered correct. (D05841R01)

